

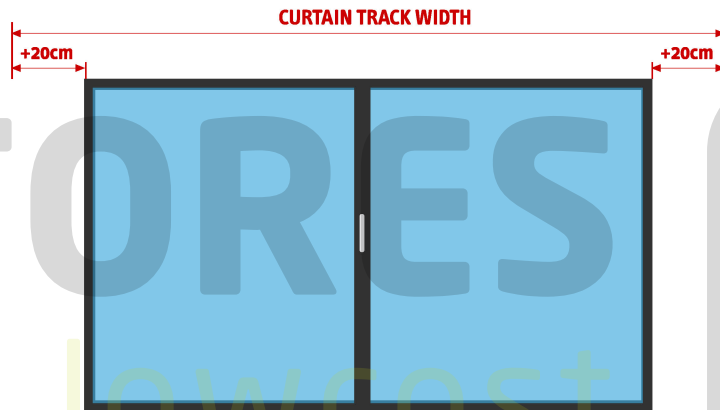


IF YOU DON'T HAVE A CURTAIN TRACK ALREADY INSTALLED, WE RECOMMEND LEAVING AN ADDITIONAL 20cm FOR EACH SIDE OF THE WINDOW VAIN, IN ORDER FOR THE CURTAIN TO PERFECTLY COVER THE VAIN.

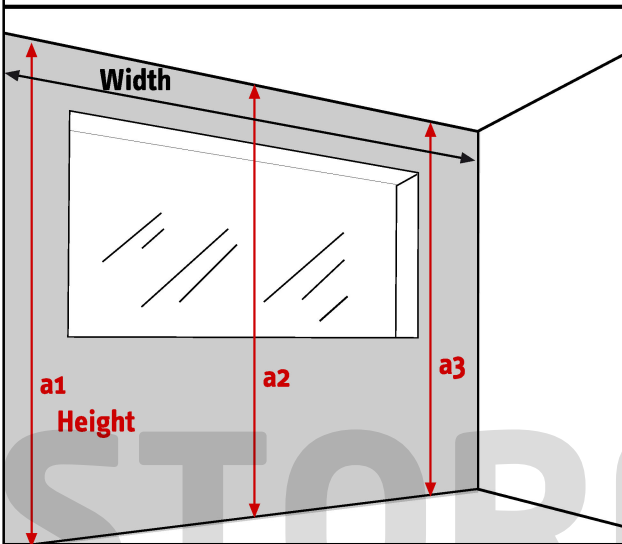


IF YOU ALREADY HAVE A CURTAIN TRACK INSTALLED.

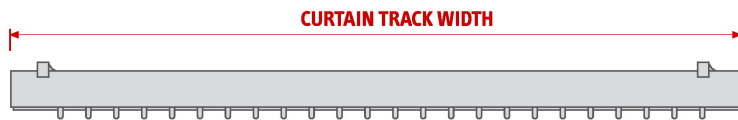



HOW TO MEASURE THE HEIGHT FOR A CURTAIN TRACK

- Always indicate the **height** measured from the ceiling to the floor. Our experts will deduct the height of the respective track and a clearance of 1 cm for the floor.
- If you want other measures, you must mention it.
- Measure the height in three points - in the edges and in the middle.
- The curtain track includes the fixing brackets for the ceiling. In case of wall mounting, you must mention respective squares.

HOW TO MEASURE THE HEIGHT FOR THE CURTAIN

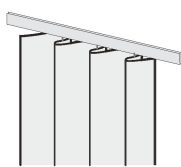

FOR CURTAINS WITH WAVES

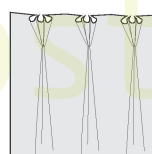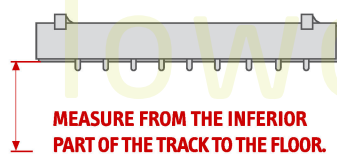

FOR PENCIL-PLEATED CURTAINS

